



# MS EASY INSTRUCTIONS

---



**oliser**  
GLOBAL



10 Galloway Road  
Hillcrest, 3610, KZN  
Republic of South Africa

*Tel* : +27 31 765 2544

*Fax* : +27 31 765 2399

*Web* : [www.oliser-global.com](http://www.oliser-global.com)

*Email* : [info@oliser-global.com](mailto:info@oliser-global.com)



## PREPARATION

Place an Ink supply bottle to the back of the machine and insert the ink supply tube into the bottle.


Plug in the plug and the machine will be ready to start filling .

Now, The machine is ready to fill the cartridges. Before filling the cartridges, be sure that they are empty. If not, evacuate the remaining ink from cartridge.

This machine is designed to only fill FRESH CARTRIDGES (you can also fill non-fresh cartridges using a steam generator before filling)

**Strictly recommended :** Before filling the cartridges we recommend you to clean the printheads of the cartridges by a steam generator. It will help you to fill the cartridges easily and will open the all clogged or dried printheads, So, your success rate will increase

# MS EASY

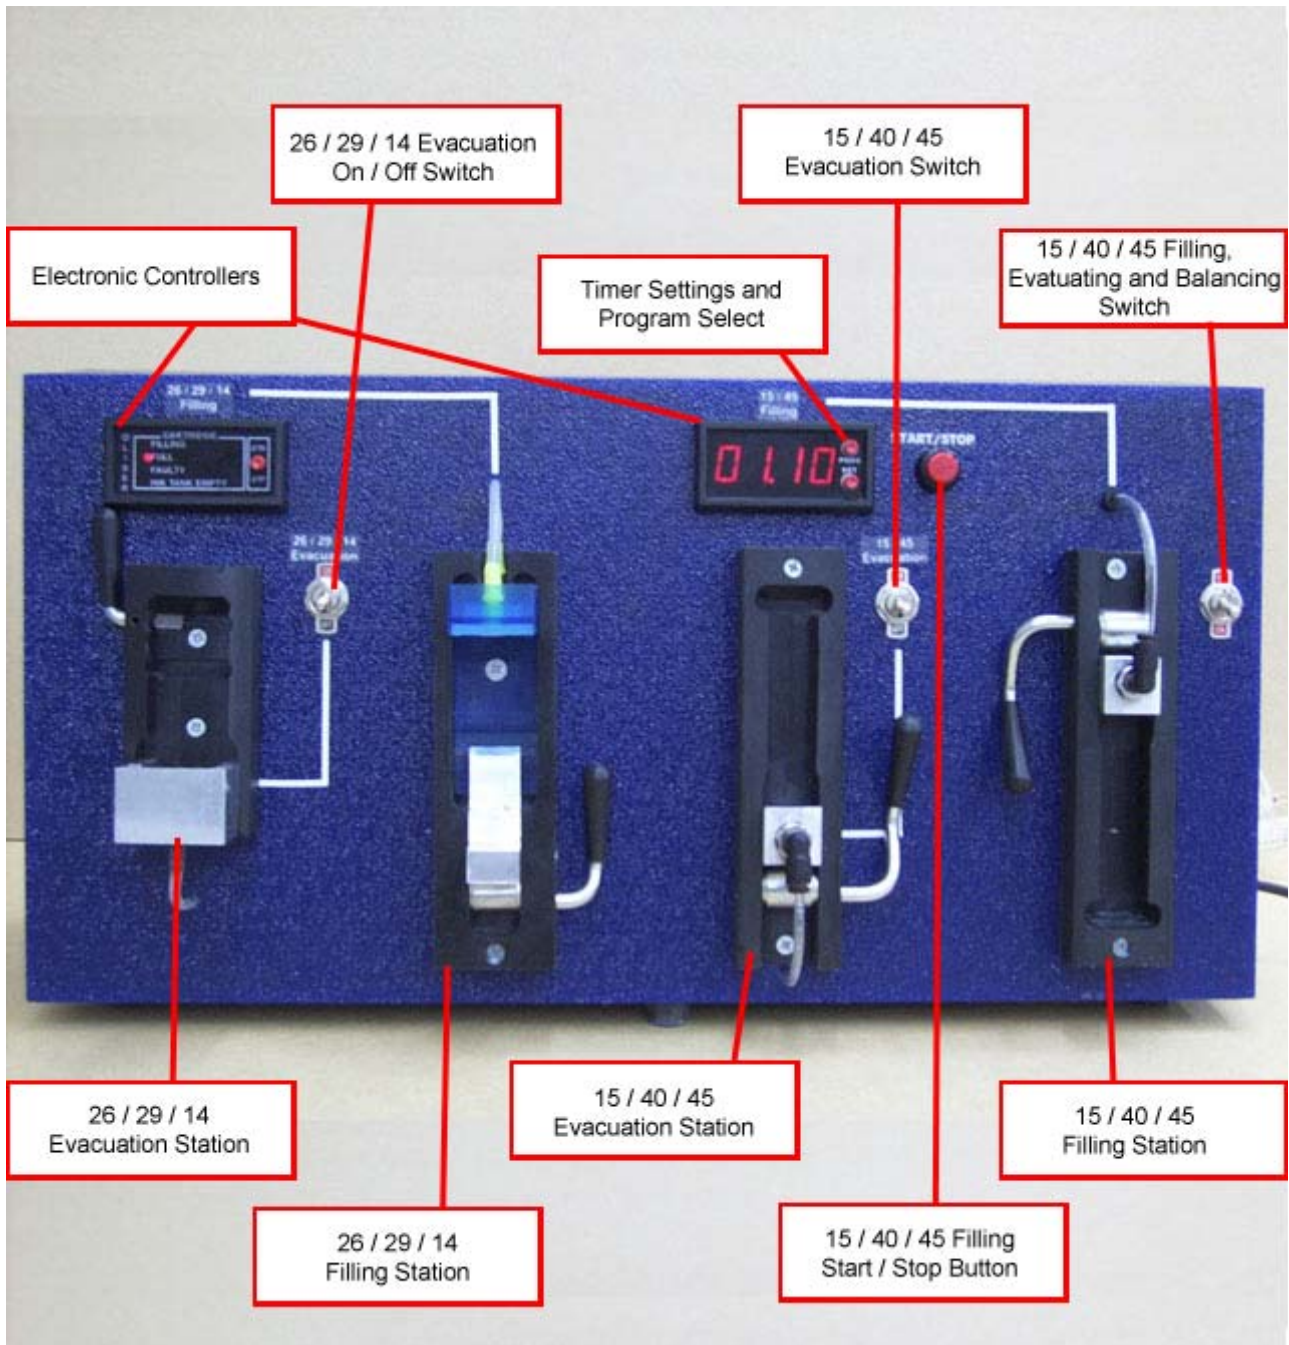



**EVACUATING  
& FILLING  
26 / 29 / 14 SERIES  
CARTRIDGES**



**Check, if the cartridge is undamaged for filling**



**Place the cartridge to the evacuation station**



**Switch On for Evacuation**



**Be sure that the remaining ink is removed, and flip the handle down to take out the cartridge**



**Take the cartridge out for starting filling operation**



**Place the cartridge to the filling station**



**Flip the handle up to squeeze the cartridge**



**Push the Start / Stop button to start filling**



Follow the filling of cartridge, When you notice that the cartridge is filled, Push to Start / Stop button again to stop filling operation.  
And Leave the cartridge for pressurizing. When the pressurizing is completed, you will hear a "bip" sound which means that the cartridge is ready for testing.



Remove the cartridge from the filling station and then check the weight of the cartridge by an electronic scale.  
The cartridge's weight must be 58-60 gr. If it is more than that, then evacuate excess ink from the cartridge using the evacuation station up to correct weight.

**EVACUATING  
& FILLING  
15 / 40 / 45 SERIES  
CARTRIDGES**

---



**Place the cartridge to the 15/40/45 Evacuation Station and Flip the handle up to squeeze the cartridge**




**Switch On for Evacuation**



**When the evacuation operation is completed, then remove the cartridge from the station, flipping the handle down**



**Place the cartridge to the 15/40/45 filling station for filling operation**

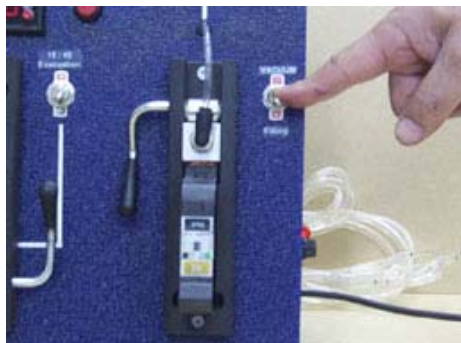

Before starting filling operation, Do 20 seconds of evacuation by switching Up to the evacuation position then flip the switch to the filling position.



Push the Start Stop button to start filling operation.



When the filling is completed, flip the switch to the evacuation position at least 5 seconds for pressurizing then remove the cartridge using the handle.



We adjusted timer for 1 minuted and 10 seconds to fill approximatly 40ml ink into the cartridge. Check the weight of the cartridge after each filling operation. Avarage weight of filled cartridges must be around 104-108 gr. You can change the timer setup depending on the weight of filled cartridges.